

# Bubble Removal From Aqueous Streams Using 3M™ Liqui-Cel™ SP Series Membrane Contactors

## Introduction

Many manufacturing processes, analytical measurements, and other industrial processes that involve aqueous solutions are adversely affected by bubbles in the fluid stream. 3M™ Liqui-Cel™ SP Series Membrane Contactors provide a very simple, cost effective solution to help eliminate bubbles from such processes.

## Background

When liquids and gases are brought into contact with each other, mass transfer between the two phases will occur. The concentration of gas dissolved in the liquid will continue to increase until equilibrium is reached, after which the concentration remains. The liquid is said to be “saturated” at this stage, which is reached quickly under most conditions. Therefore, design engineers must assume that a liquid stream is saturated with any gas with which it has come in contact.

## Bubble Formation

Once a liquid process stream has become saturated with a given gas or gas mixture, the concentration of the gases in the liquid will remain constant until equilibrium conditions change. For example, an increase in system pressure will cause more gases to dissolve into the liquid stream, while a decrease in system pressure will cause gases to be released.

When gases are released, bubbles form in the liquid, creating potential problems for manufacturing processes. For example, if the liquid is used in a cleaning or coating process, bubbles can adhere to product surfaces and cause defects that significantly reduce yield.

## Bubble Prevention and Elimination

Liqui-Cel SP Series membrane contactors offer a cost-effective and simple way to prevent and eliminate bubble formation. Listed below is one example that demonstrates the effectiveness of Liqui-Cel SP Series membrane contactors for yield improvement.

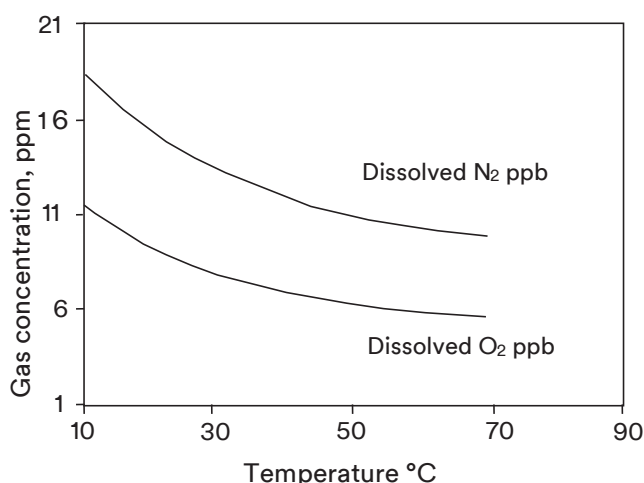


Figure 1. Dissolved gas concentration in water at atmospheric pressure

## Application:


A customer is processing a coating solution that is prepared at 20°C and then heated to 60°C prior to application. The heating step causes significant offgassing of the solution.

Venting the solution removes some excess gas, but is ineffective at maintaining dissolved gases at a consistent level during manufacturing runs. As a result, product yields vary over time.

## Solution:

The difficulty with simply venting excess gas is that the coating solution is still saturated with gases. Any further pressure reductions and/or temperature increases create additional bubbles. Placing a 3M™ Liqui-Cel™ SP Series Membrane Contactor inline before the heater minimizes any bubble formation. Figure 1 shows the gas content of the liquid at 20°C and 60°C. By knowing the gas concentration of the fluid at 60°C, a Liqui-Cel membrane contactor system can be designed that reduces the gas concentration well below any process condition where gas could develop. This can completely eliminate the possibility of bubble formation. Due to the high efficiency of Liqui-Cel SP Series membrane contactors, a single membrane contactor will be adequate to reduce the gas concentration to satisfactory levels. In Figure 2, a process flow schematic of a typical system designed to eliminate bubbles is shown. Bubble removal systems utilizing Liqui-Cel SP Series membrane contactors offer several distinct advantages over existing technologies.

**Modularity.** Membrane contactor systems are inherently modular, which means that they can be easily and economically adjusted to accommodate process changes.

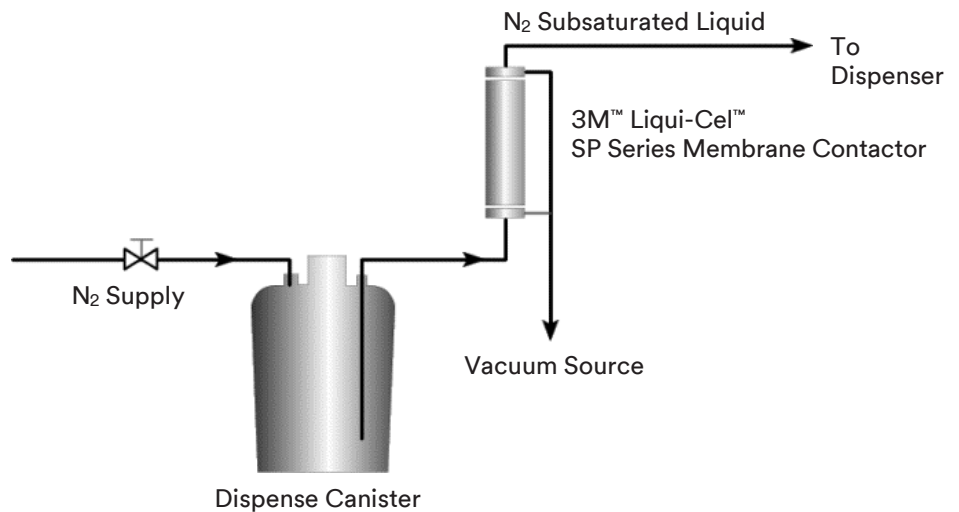

**Figure 2.** 3M™ Liqui-Cel™ SP Series Membrane Contactor flow schematic chemical delivery system

**Small footprint.** Liqui-Cel SP Series membrane contactors can be packaged into compact configurations. In addition, systems can be custom designed to fit into existing space constraints. Point-of-use systems can also be designed.

**Ease of operation.** With almost no instrumentation, Liqui-Cel SP Series membrane contactors are very simple to operate.

**Consistency.** Gas content in liquid process streams can be maintained very precisely even with simple process control systems.

For more information on bubble removal in process streams, please contact your 3M representative or visit [3M.com/Liqui-Cel](http://3M.com/Liqui-Cel).

**Technical Information:** The technical information, guidance, and other statements contained in this document or otherwise provided by 3M are based upon records, tests, or experience that 3M believes to be reliable, but the accuracy, completeness, and representative nature of such information is not guaranteed. Such information is intended for people with knowledge and technical skills sufficient to assess and apply their own informed judgment to the information. No license under any 3M or third party intellectual property rights is granted or implied with this information.

**Product Selection and Use:** Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. As a result, customer is solely responsible for evaluating the product and determining whether it is appropriate and suitable for customer's application, including conducting a workplace hazard assessment and reviewing all applicable regulations and standards (e.g., OSHA, ANSI, etc.). Failure to properly evaluate, select, and use a 3M product and appropriate safety products, or to meet all applicable safety regulations, may result in injury, sickness, death, and/or harm to property.

**Warranty, Limited Remedy, and Disclaimer:** Unless a different warranty is specifically stated on the applicable 3M product packaging or product literature (in which case such warranty governs), 3M warrants that each 3M product meets the applicable 3M product specification at the time 3M ships the product. 3M MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ARISING OUT OF A COURSE OF DEALING, CUSTOM, OR USAGE OF TRADE. If a 3M product does not conform to this warranty, then the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

**Limitation of Liability:** Except for the limited remedy stated above, and except to the extent prohibited by law, 3M will not be liable for any loss or damage arising from or related to the 3M product, whether direct, indirect, special, incidental, or consequential (including, but not limited to, lost profits or business opportunity), regardless of the legal or equitable theory asserted, including, but not limited to, warranty, contract, negligence, or strict liability.

3M and Liqui-Cel are trademarks of 3M Company. All other trademarks are the property of their respective owners. © 2021 3M Company. All rights reserved.



**3M Company**  
3M Separation and  
Purification Sciences Division  
13840 South Lakes Drive  
Charlotte, North Carolina  
28273 USA  
Phone: +1 980 859 5400

**3M Deutschland GmbH**  
3M Separation and  
Purification Sciences Division  
Öhder Straße 28  
42289 Wuppertal Germany  
Phone: +49 202 6099 - 0

LC-1026  
70-2016-0212-8

Rev. 02/2021

[3M.com/Liqui-Cel](http://3M.com/Liqui-Cel)