

Blending tradition with innovation.

A fine wine is more than just the sum of its ingredients. This is why 3M works directly with individual producers to define an ideal system for clarification, prefiltration and final filtration. With cost-effective, efficient and reliable solutions, there's a reason wine producers all over the world choose 3M filtration and separation systems.

Performance

- Help improve product consistency for everything from clarity to stability
- Efficient products with long service lives and high flow rates
- Excellent contaminant holding capacity

Quality


- Certified to ISO 9001 standards
- Help improve taste and consistency
- Rigorous internal validation tests

Convenience

- Designed for ease of use, minimizing labor and system downtime
- Products can be integrated into many types of production lines

Wine Making Process

Here's an example of where filtration and gas control can enhance your wine production process.

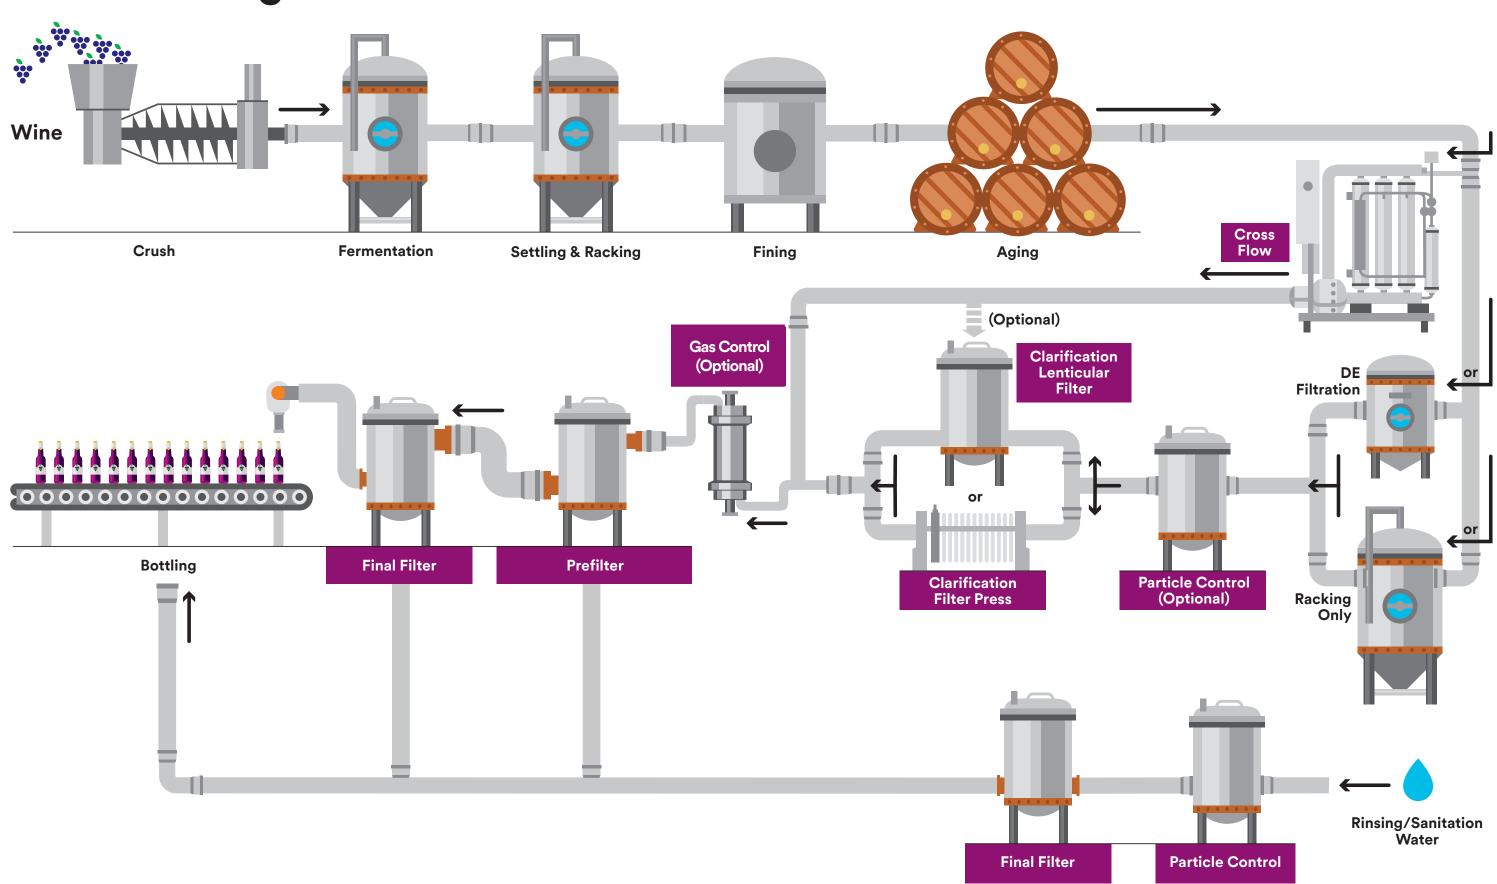

3M[™] High Flow Filtration Systems

High flow capacbility in a compact design.

Requiring fewer cartridges and smaller filter vessels than traditional systems, 3M High Flow Filtration Systems can be used in particle control applications in water or wine, rough clarification or prefiltration of bulk wine or 3M[™] Liqui-Cel[™] Membrane Contactors.

Comparison of Potential Options to Obtain a System Operating at a Rate of 350 gpm (80m³/Hr)

3M High Flow filtration system

2.5" (63.5 mm)

pleated cartridges

1 cartridge in a housing with a 8.6" (218 mm)

a housing with

18 cartridges in a 14" (356 mm) 2.5" (63.5 mm) depth filters




24 cartridges in a housing with a 16" (406 mm)

90% fewer cartridges.

Comparison of Potential Options to Obtain a System Operating at a Rate of 2000 gpm (454m³/Hr)

3M High Flow

2.5" (63.5 mm) filtration system pleated cartridges

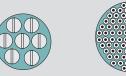

7 cartridges in a housing with a 24" (610 mm) diameter

85 cartridges in a housing with a 30" (762 mm) diameter

2.5" (63.5 mm) depth filters



120 cartridges in a housing with a 36" (914 mm) diameter

33-50% reduction in housing size.

3M™ High Flow Filter Cartridge Design Features

Quick and Easy Filter Replacement

The user-friendly filter design allows the filters to be replaced in an easier and faster way.

Polypropylene Structure

Provides broad compatibility with different types of fluids.

Radial Pleat Pattern

Maximizes the usable filter surface per cartridge.

Easy to Use


Ergonomic and handy design, fast and easy to insert and remove without the need for any equipment.



High Flow Rate

3-inch core permits to 500 gpm (113 m³/hour) through a single 60-inch length cartridge. Bayonet attachment ensures easy fitting.



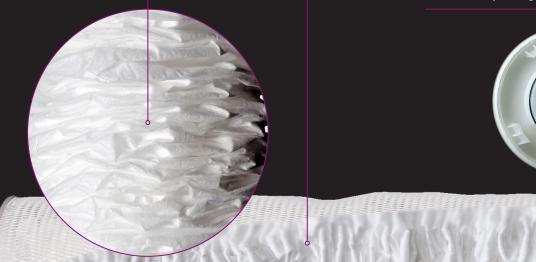

6 | Wine Production | 7

Stop the presses.

Winemakers have used conventional plate and frame filter presses for years, despite their many recognized downfalls. 3M[™] Zeta Plus[™] Series Filters were designed as a convenient and cost-effective alternative for wine filtration.



3M™ Zeta Plus™ H Series Filters

Charge-modified depth filters constructed with high-tensile strength media.

- High wet-tensile strength filter media withstands multiple steaming and hot water sanitization and regeneration cycles
- Extended filter life can provide high throughputs, fewer change-outs and reduced operating costs
- Provides efficient haze and particle reduction

3M™ Zeta Plus™ MH Series Filters

Designed to provide optimal clarification and prefiltration in wine, 3M Zeta Plus MH Series Filters are an advanced, dual-zone depth filter.

Their unique construction enhances the contaminant holding capacity of the filter by trapping larger particles, hazes and microorganisms in the upstream layer, and smaller ones in the downstream layer.

- Higher throughput, lower processing costs and smaller filter assemblies
- Dual zone depth filter enhances contaminant loading capacity
- Withstands the rigors of hot water, steam and chemicals for longer service life

3M™ Zeta Plus™ Series Filters vs. Filter Press

	3M Zeta Plus Series Filters	Filter Press
Leakage	Zero leakage, saves valuable wine — no oxygen/ bacteria pick up	Up to 1-2% of volume filtered
Labor	15 minute change-out times	Two to four hour change-out times, reducing productivity
Change-Outs	Changed when filtration capacity achieved, fewer filters needed	Changed based on time on the press
Capital Costs	Typically 25-50% the capital cost of a stainless steel filter press	Filter presses are large, expensive pieces of equipment
Maintenance	Three O-rings, easy to clean and maintain	Four O-rings per plate, heavy plates must be cleaned regularly
Disposal	Fewer change-outs results in reduced disposal costs	Additional disposal costs could be incurred
Floor Space	Small footprint frees up space for other operations	A 60cm² press requires up to 100 sq. ft. of floor space
Energy Consumption	Reach sanitation temperatures in about 15 minutes	Reach sanitation temperatures in 30-90 minutes




8 | Wine Production 9

3M™ Liqui-Cel™ Membrane Contactors

Dissolved gas control in a versatile, compact solution.

The taste and consistency of wine are linked to levels of dissolved gas content. Removing oxygen can help extend the product's shelf life, and adding/removing carbon dioxide can make a product taste more pleasant. In general, gas control systems help improve the quality of the product, from the first sip to the last drop.

Meet target product specifications with dissolved gas control.

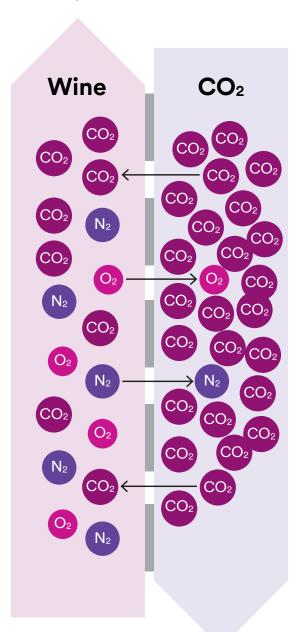

High Performance and Efficiency

- Predictable, precise gas control that can achieve oxygen concentrations of less than 0.1 mg/l
- Avoid the use of nitrogen gas for sparging and replace N₂ with CO₂

Compact and Versatile


- Can be installed in confined spaces
- Custom and modular system designs
- Can be used in several process phases: directly after clarification, tank to tank or before bottling

Rapid Gas Control

- Can make the use of tanks or pumps redundant
- Helps speed up production processes by minimizing gas control process times

Deoxygenation

Oxygen in wine can compromise its quality and accelerate deterioration. By limiting the amount of O_2 in wine, $3M^{\mathsf{T}}$ Liqui-CelTM Membrane Contactors can help protect shelf life and reduce impacts to aroma and taste.

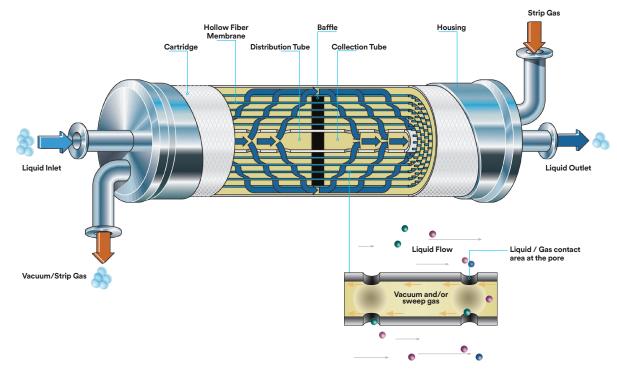

Addition or Removal of Carbon Dioxide

Carbon dioxide affects the taste and sensation on the palate. In-line gas control with 3M Liqui-Cel Membrane Contactors can help boost operational efficiency while maintaining or improving product quality and consistency.



10 | Wine Production | 11

3M™ LifeASSURE™ BLA Series Filters

Many bottling applications use one or more prefilters and a final filter, arranged in series, to achieve maximum performance and cost reduction.

Technology

By combining a graded-density microporous membrane made of N66 nylon with Advanced Pleat Technology (APT), 3M LifeASSURE BLA Series filters guarantee protection for the final membrane filters and extend service life. The graded-density structure makes it possible to remove large particles and colloidal elements via the filter medium's external layer, which is more open, while smaller particles are retained in the filter's narrower internal zones.

This structure enables the contaminants to be distributed throughout the whole depth of the filter, thereby minimizing the pressure drop and maximizing the retention capacity.



3M™ Betafine™ PBG Series Filters

Multi-layer polypropylene 3M Betafine PBG Series Filters feature Advanced Pleat Technology (APT) to capture contaminant throughout the filter media to maximize retention capacity and filter life.




Benefits

- Consistent and reproducible retention of contaminants and protection of downstream membranes
- Reduction in total filtration operating costs, resulting from extended service life and reduced number of replacements
- Polypropylene construction makes it compatible with a range of chemical and temperature, such as high temperature sanitization

3M[™] Betafine[™] XL Series Filters



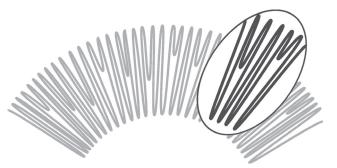

Advanced Pleat Technology (APT)

12 | Wine Production | 13

3M™ LifeASSURE™ BA and BNA Series Filters

Membrane filtration is the best method to use to achieve microbiological stability without using chemicals or heat. This ensures that the organoleptic properties of the wine are preserved until opening the product, whether this occurs weeks, months or years after bottling.

3M™ LifeASSURE™ BA (Nylon 6,6 membrane) and BNA (PES, highly asymmetric membrane) Series cartridges are available with retention grades of 0.65 µm in order to eliminate yeast, mold and bacteria, and 0.45 µm for removal of smaller microorganisms responsible for spoiling wine. These technologies offer a greater capacity for holding contaminants and less resistance to flow, all resulting in a lower pressure drop compared to conventional membranes.



Extended service life.

Resistant to steam and chemical cleaning, 3M LifeASSURE BNA Series Filter cartridges offer a long service life. Service life is measured in terms of "volume filtered" and "number of operating days before exhaustion". Filters which offer longer service lives not only reduce direct operational costs, but also reduce indirect filtration costs for tasks, such as filter change-out/installation, machine downtime and regeneration.

3M™ LifeASSURE™ **BA and BNA Series Filters**

These cartridges provide thermal resistance permitting continuous service under demanding process conditions.

Benefits

- High surface area improves flow and filter life
- Spoilage organism retention provides reliable microbiological control
- Durable cartridge design withstands repeated hot water sanitation cycles
- Individually serialized and integrity tested in manufacturing fully traceable



14 | Wine Production

Water used in hot water sanitation in the winery must be filtered to the same degree as the wine.

Clean water is necessary in bottle washing, sanitation and cooling systems. Water that is free of particle and microorganism contamination helps protect the integrity of a wine processing system and improves the service life of filters.

Benefits

• Allows for broad chemical and temperature compatibility




3M™ Betapure™ NT-T Series Depth Filters


filtration technology designed to provide excellent service life while

maintaining a consistent filtration efficiency. 3M Betapure NT-T Series filters achieve this through an innovative cartridge design that allows uniform distribution of fluid flow and contaminant

3M™ Betapure™ NT-T Series filter cartridges are a 3M depth

throughout the entire depth of the cartridge.

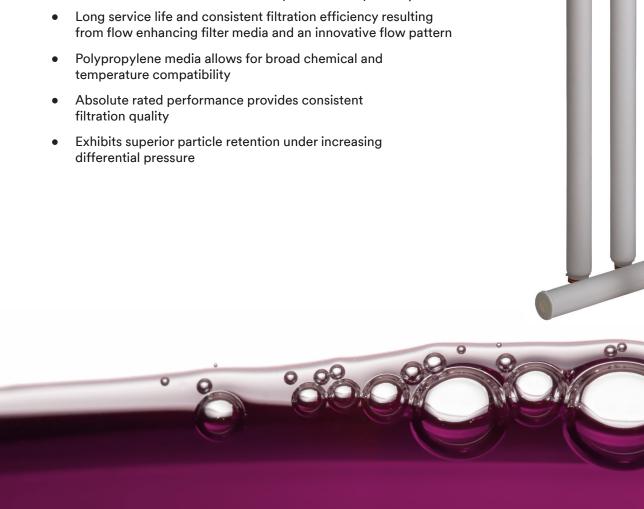

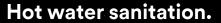

Hot water sanitation is used to sanitize plumbing lines and wine filters.

Sanitation water filtration is essential to ensure downstream stability and avoid contamination between process cycles.

Use of poorly filtered water to rinse or sanitize filters can result in early filter exhaustion.





Product Selection and Use:

Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. As a result, customer is solely responsible for evaluating the product and determining whether it is appropriate and suitable for customer's application, including conducting a workplace hazard assessment and reviewing all applicable regulations and standards (e.g., OSHA, ANSI, etc.). Failure to properly evaluate, select, and use a 3M product and appropriate safety products, or to meet all applicable safety regulations, may result in injury, sickness, death, and/or harm to property.

Warranty, Limited Remedy, and Disclaimer:

Unless a different warranty is expressly identified on the applicable 3M product literature or packaging (in which case such express warranty governs), 3M warrants that each 3M product meets the applicable 3M product specification at the time 3M ships the product. 3M MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ARISING OUT OF A COURSE OF DEALING, CUSTOM, OR USAGE OF TRADE. If a 3M product does not conform to this warranty, then the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

Limitation of Liability:

Except for the limited remedy stated above, and except to the extent prohibited by law, 3M will not be liable for any loss or damage arising from or related to the 3M product, whether direct, indirect, special, incidental, or consequential (including, but not limited to, lost profits or business opportunity), regardless of the legal or equitable theory asserted, including, but not limited to, warranty, contract, negligence, or strict liability.



3M Purification Inc. 3M Separation and Purification Sciences Division 400 Research Parkway Meriden, CT 06450 USA

Phone 1-800-243-6894 Web 3M.com/purification For more information about 3M filtration solutions for wine production, please visit our website at:

3M.com/purification

3M, Betafine, Betapure, Clean-Trace, LifeASSURE, Liqui-Cel, Liqui-Flux and Zeta Plus are trademarks of 3M Company. © 3M 2022. All rights reserved. Please recycle. 70-2016-0351-4

Rev. 01/2023