

3M[™] Liqui-Cel[™] SP-1×3 Series Membrane Contactor

Typical Properties

Membrane Characteristics			
Cartridge Configuration	Radial Flow		
Liquid Flow Guidelines	15–60 ml/min (Liquid must flow on the shellside)		
Flow rates are guidelines for product selection and reflect the flow range at which the product was tested. Product may be capable of operating above listed flow range depending on liquid being degassed and user's target dissolved gas requirements.			
Membrane Type	UP	UPII	
	Recommended for low surface tension liquids that are water-based	Recommended for low surface tension fluids with aggressive formulations	
Membrane/Potting Material	Polyolefin / Polyethylene		
Priming Volume			
Shellside	15 ml		

Pressure Guidelines*		
Maximum Shellside LIQUID	5-25°C, 3.1 barg (41-77°F, 45 psig)	
Working Temperature/ Pressure	40°C, 1.0 barg (104°F, 15 psig)	

^{*} Note: Liquid pressure should always exceed gas pressure.

Housing Characteristics	
Material	Black Polyethylene
Connections	
Shellside (Liquid Inlet/Outlet)**	¼ inch NPT Male Standard Female Luer Lock
Lumenside (vacuum)**	⅓ inch NPT Male Standard Female Luer Lock


^{**} Note: Use of metal connectors is not recommended.

Weight (approximate)		
Dry	28 grams	

Regulatory

Complies with the limits as set by (EU) 2015/863 amending Annex II to the Restriction on Hazardous Substances (RoHS) Directive (2011/65/EU). 3M™ Liqui-Cel™ SP-1×3 Series Membrane Contactors <u>are not</u> constructed of FDA Title 21 CFR § 174-186 compliant materials. Not for use in food contact applications.




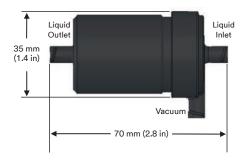


All dimensions are nominal values. Refer to 3M.com/Liqui-Cel for detailed housing drawings.

Not for consumer sale or use.

3M[™] Liqui-Cel[™] SP-1×3 Series Membrane Contactor

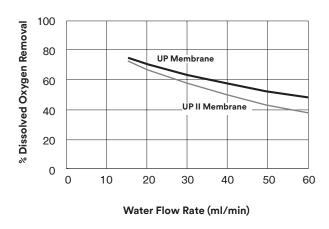

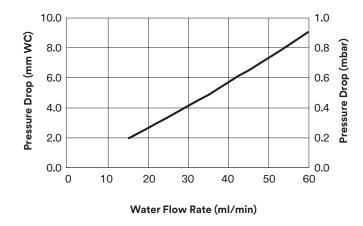

Test condition O₂ Removal: Vacuum mode with water at 35°C. Vacuum: 50 torr

Technical Information: The technical information, guidance, and other statements contained in this document or otherwise provided by 3M are based upon records, tests, or experience that 3M believes to be reliable, but the accuracy, completeness, and representative nature of such information is not guaranteed. Such information is intended for people with knowledge and technical skills sufficient to assess and apply their own informed judgment to the information. No license under any 3M or third party intellectual property rights is granted or implied with this information.

Product Selection and Use: Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. As a result, customer is solely responsible for evaluating the product and determining whether it is appropriate and suitable for customer's application, including conducting a workplace hazard assessment and reviewing all applicable regulations and standards (e.g., OSHA, ANSI, etc.). Failure to properly evaluate, select, and use a 3M product and appropriate safety products, or to meet all applicable safety regulations, may result in injury, sickness, death, and/or harm to property.

Warranty, Limited Remedy, and Disclaimer: Unless a different warranty is specifically stated on the applicable 3M product packaging or product literature (in which case such warranty governs), 3M warrants that each 3M product meets the applicable 3M product specification at the time 3M ships the product. 3M MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ARISING OUT OF A COURSE OF DEALING, CUSTOM, OR USAGE OF TRADE. If a 3M product does not conform to this warranty, then the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

Limitation of Liability: Except for the limited remedy stated above, and except to the extent prohibited by law, 3M will not be liable for any loss or damage arising from or related to the 3M product, whether direct, indirect, special, incidental, or consequential (including, but not limited to, lost profits or business opportunity), regardless of the legal or equitable theory asserted, including, but not limited to, warranty, contract, negligence, or strict liability.

3M and Liqui-Cel are trademarks of 3M Company. All other trademarks are the property of their respective owners. © 2021 3M Company. All rights reserved.



3M Company 3M Separation and Purification Sciences Division 13840 South Lakes Drive Charlotte, North Carolina 28273 USA Phone: +1 980 859 5400

3M Deutschland GmbH 3M Separation and Purification Sciences Division Ohder Straße 28 42289 Wuppertal Germany Phone: +49 202 6099 - 0

LC-1019 70-2016-0255-7 Rev. 02/2021

3M.com/Liqui-Cel